 




## How to: Change the Network Setup of a KE2 Evaporator Efficiency Controller

### Connect computer and KE2 Evap to ports 2 - 10 on the KE2 SmartGate, and power them on.

1. In your Internet browser, enter the IP Address found on the back side of the controller.  
Example: http://10.10.58.100

2. Click the Network button  on the bottom Navigation Menu.

 
3. Click the Login button  in the lower right corner of the page

3. Enter User Name: ke2admin  
Enter Password: ke2admin


User Name

 
Password

**Important:** for security reasons, the User Name and Password should be changed from the default. To change the User Name and Password, once logged in go to the Settings page.

4. Click the Submit button  on the bottom of the Navigation Menu, or hit Enter (Return) on your keyboard.

5. On the Network Setup page, Change the IP Address, Subnet Mask, Gateway and Primary DNS IP addresses as necessary. **NOTE: Controllers must be unbonded prior to changing Network Settings.**

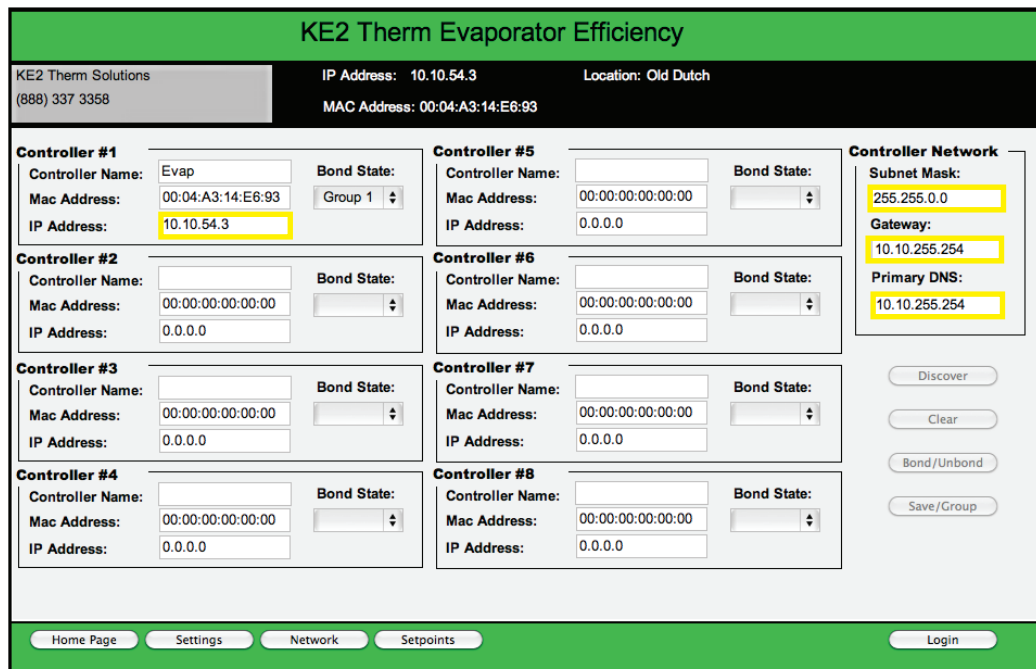

6. Once you have made the appropriate changes, click the Save/Group button  on the lower right hand side of the page.

7. Congratulations! You have successfully modified the IP Address.

**REMEMBER: After the IP Address has been changed, the new IP Address must be used to access the controller.**