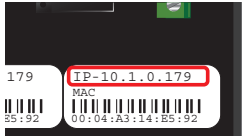 




 
How to: Setup E-mail/Text Alerts for a KE2 Evaporator Efficiency Controller

Connect locally or remotely to the KE2 Evap with computer/tablet/smart phone.

 
1. Find the KE2 Evap's IP Address on a sticker on the backside of the controller.
Example: 10.1.0.179

 


2. Then, in your Internet browser, enter the IP Address into the address bar.



Press Enter (Return) on your keyboard.

3. Once the Home Page has loaded, click the Settings button  on the bottom Navigation Menu.

 
4. Click the Login button  in the lower right corner of the page

5. Enter User Name: ke2admin*
Enter Password: ke2admin

User Name

Password

** Important: this is the default setup, for security reasons, the User Name and Password should be changed from the default. To change the User Name and Password, once logged in go to the Settings page.*

6. Click the Submit button  on the bottom of the Navigation Menu, or press Enter (Return) on your keyboard. The Settings Page is now displayed.



How to: Setup E-mail/Text Alerts for a KE2 Evaporator Efficiency Controller

7. Find the Alert Notifications section on the page and enter the information requested.
 - A Designate your email server, (can be a Gmail server e.g. smtp.gmail.com)
 - B Input your email server User Name, (e.g. John Smith)
 - C Enter your email password
 - D Address for Alerts can be an email address or text address (see references below)
 - E Enter the subject you would like to appear on the alert notification

KE2 Therm Evaporator Efficiency

KE2 Therm Solutions (888) 337 3358 IP Address: 10.1.0.179 Location: (Set Location) Settings Page
MAC Address: 00:04:A3:52:C8:47

Alert Notifications

A Email Server: smtp.gmail.com Basic (Port 25) [v]
B User Name: johnsmith
C Password:
D Address for Alerts: js@gmail.com Test Email
E Alerts Subject: Freezer Alarm Submit

Location Settings

Business Name: KE2 Therm Solutions
Phone Number: (888) 337 3358
Location: (Set Location)

Firmware

Bootloader
20302V3.4

Controller

Reset

Web Page Log In Update

User Name: [] 8-13 characters
Password: [] 8-13 characters

Log Key Activation

Current Key: BUYJ-KUCB-T3TD
Time Remaining: 43 Days 23 Hrs
Activation Key: []
Activate

 
 
Logs

Clear

Alarms

Clear

Home Page Settings Network Setpoints Save Login

8. Once you have made the appropriate changes, click the Save button 
9. To verify the email is working properly, under Test Email click the Submit button . Verify the email was received.
10. Congratulations! You have successfully modified the Email/Text Alert.

References for setting up text alerts**:

T-Mobile: phonenumber@tmomail.net
Virgin Mobile: phonenumber@vmobl.com
Cingular: phonenumber@cingularme.com
Sprint: phonenumber@messaging.sprintpcs.com
Verizon: phonenumber@vtext.com
Nextel: phonenumber@messaging.nextel.com
AT&T: phonenumber@txt.att.net

** See bulletin F.1.9 for additional carriers.