



Connecting to KE2 Therm Controllers Using the KE2 SmartGate Router

Steps to connect:

- 1 Find available Wireless (WiFi) signals on your mobile device (laptop, tablet, smartphone, etc.).
- 2 Connect to KE2 SmartGate wireless signal. Name of KE2 SmartGate signal can be found on KE2 SmartGate label.
- 3 When prompted for password, enter Wireless Password from KE2 SmartGate label.
- 4 Once connected to KE2 SmartGate, you can now connect to each connected KE2 Therm controller.

Find the controllers' IP Address on a sticker on the backside of the controller. Example 10.1.0.179.

Then in your Internet browser, enter the IP Address, and press Enter (Return) on your keyboard.



- 5 To make any changes to the KE2 Therm controller Settings, Login to the controller.

Click the Login button in the lower right corner of the page

Enter User Name: ke2admin*

Enter Password: ke2admin

Click the Submit button on the bottom of the Navigation Menu, or press Enter (Return).

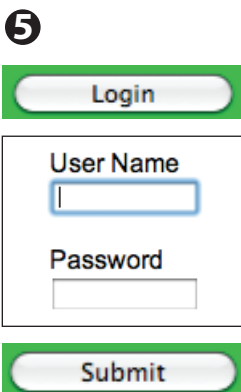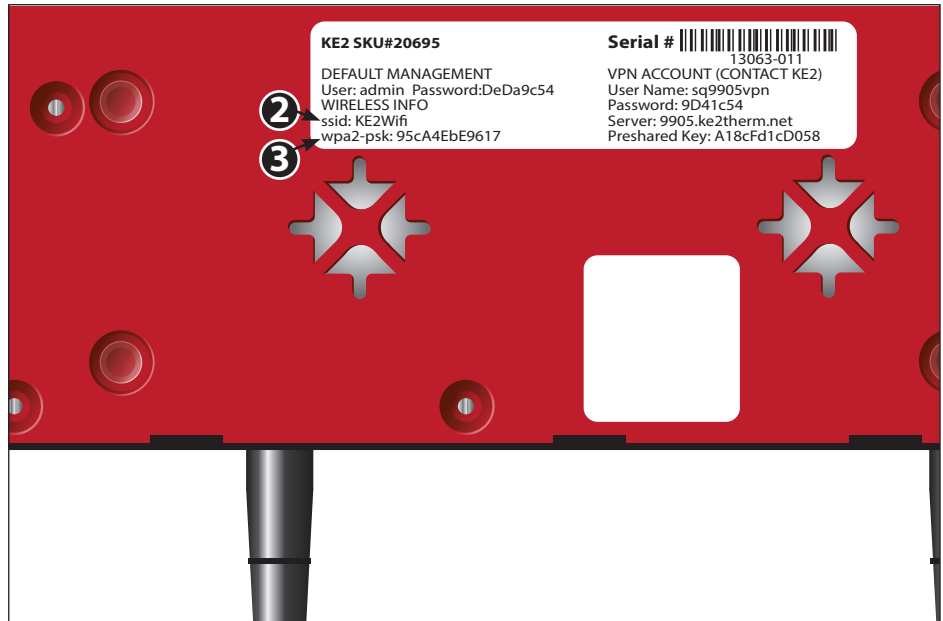

** Important: this is the default setup, for security reasons, the User Name and Password should be changed from the default. To change the User Name and Password, once logged in go to the Settings page.*